





Connecting Link 2500 to Wi-Fi


These are the steps involved in connecting a **Link/2500** chip reader to a Wi-Fi network.

- If the **Link/2500** should power itself on when plugged into a power source. However, if it is powered down, press the green button to power on the device:

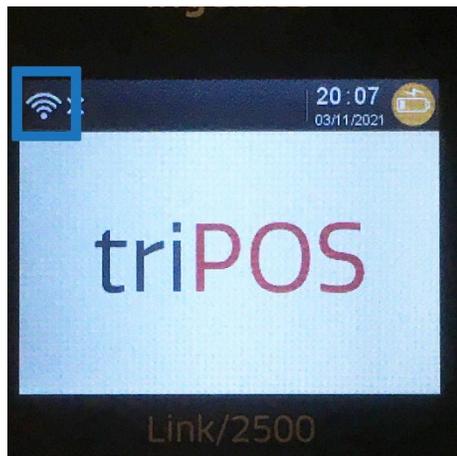

- To access the admin menu, quickly press the following buttons on the pin pad: **2, 6, 3, 4**.

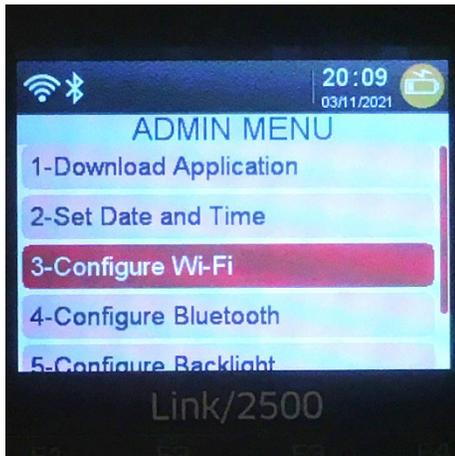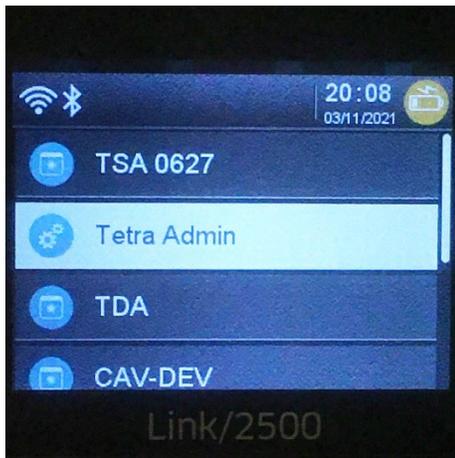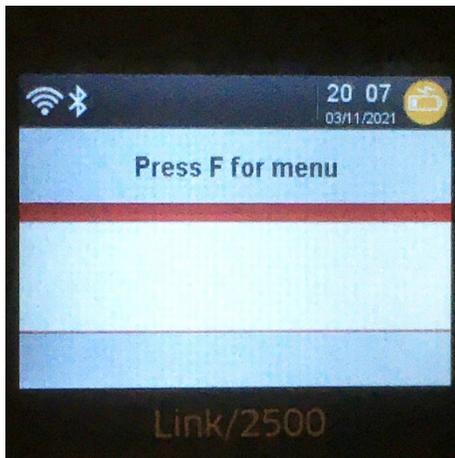

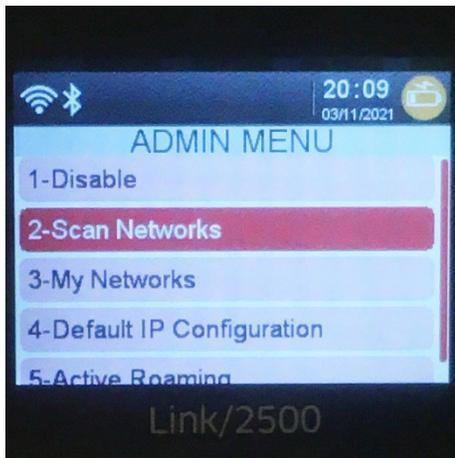

- You must now enter your Wi-Fi password. This can be done using multi-tap entry with the pin pad buttons, much like you enter text on a flip-phone. See the **Extra Tips/Notes** section for more info on multi-tap entry. This can also be done by selecting each character on the screen. Navigate to each character with the following buttons:





Change to symbols or letters by selecting the following:



When you are done, navigate to the green symbol and press the green button to save and exit:



- Your **Link/2500** will now connect to your Wi-Fi network. This may take a few moments to initialize. Once the chip reader is online, the screen should display an activation code:

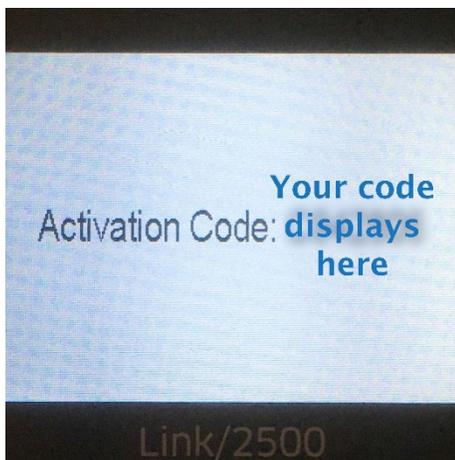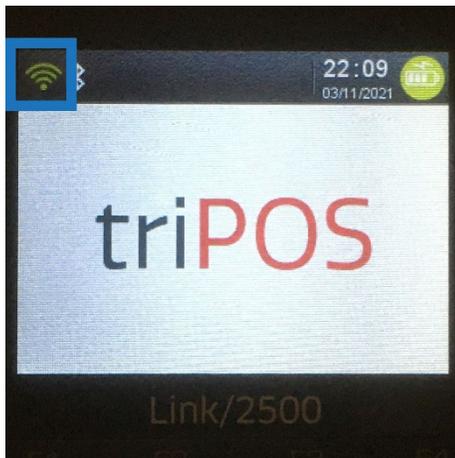

- If the activation code does not display after 30 seconds, reboot by quickly holding the # and yellow button at the same time. Once power off, hold the green button to turn the unit back on.